


INSTRUCTION FOR CONNECTING THE ELECTRIC STRIKE TO THE BUILDING'S INTERNAL SYSTEM

All work must be carried out in accordance with health and safety regulations and construction best practices by qualified personnel.

The following instructions describe the procedure for connecting the electric strike in ERKADO doors that are factory-equipped with a pull bar handle featuring a button. It is recommended that the installation be carried out by a technician certified to perform low-voltage installations.

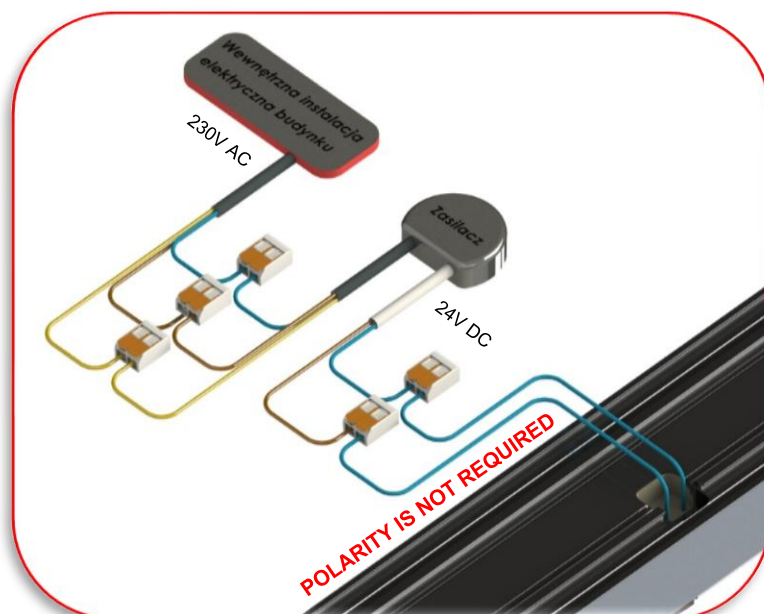

1. The electric strike is factory-installed in the door frame.
2. Proper operation of the electric strike requires a power supply unit, which is not included with the electric strike. The power supply must be ordered separately (see ERKADO catalog, accessories section). Alternatively, a different power supply unit may be used, provided it meets the following specifications: 24V DC, minimum 30W, minimum 1.25A.
3. If additional devices are planned to be connected to the power supply, a higher-power model should be selected.
4. Connecting the door to an external access control system must follow the installation instructions specific to that system.
5. Polarity is not required.
6. Erkado is not responsible for any malfunctions or damages caused by improper installation of connected devices.