


INSTALLATION INSTRUCTIONS FOR A PULL BAR HANDLE WITH A BUTTON

All work must be carried out in accordance with health and safety regulations and construction best practices by qualified personnel.




Solution available only for doors with:

- THERMO 64, THERMO 78, THERMO HOT 78, THERMO HOT 88 aluminum door frames, and
- factory-installed electrical connection (contactor) between the door frame and the door leaf.

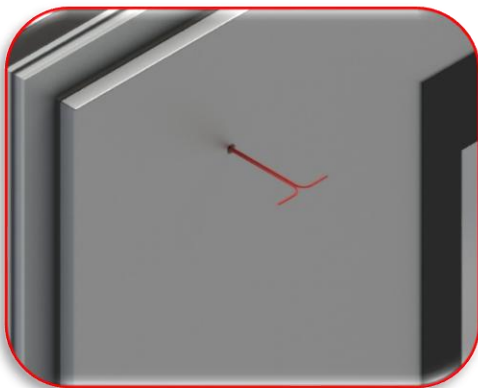

1. The wires for connecting the pull bar handle are factory-prepared.

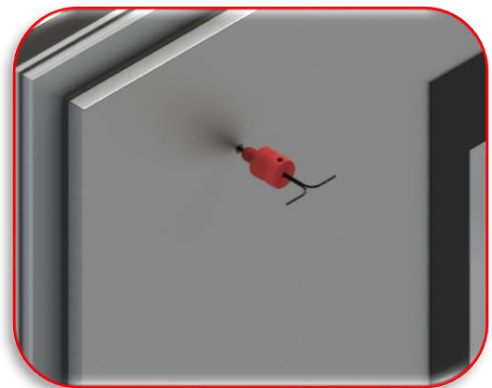


2. Thread the wires through the pull bar handle mounting element.




3. Using a screwdriver or an Allen key, screw the upper mounting element of the pull bar handle into the pre-drilled hole in the door leaf.




4. Using a screwdriver or an Allen key, screw the lower mounting element of the pull bar handle into the pre-drilled hole in the door leaf.

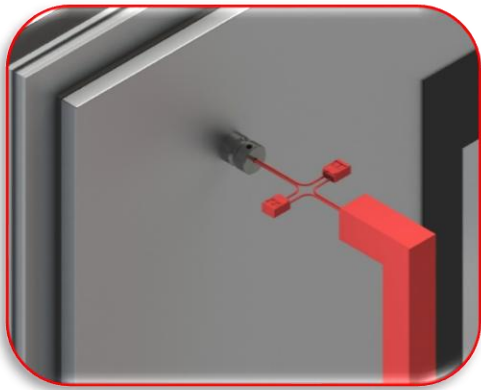

5. Connect the wires installed in the door leaf with the pull bar handle wires using the connectors provided in the set. Insert the connected wires inside the pull bar handle.

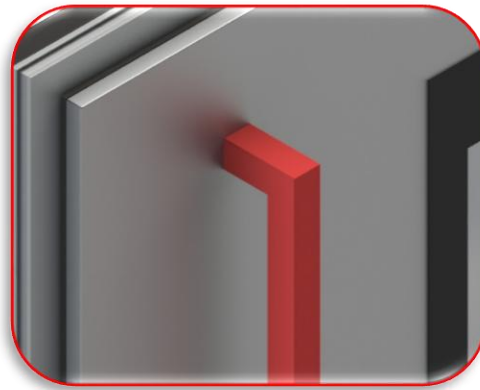

6. Place the pull bar handle onto the mounting elements.

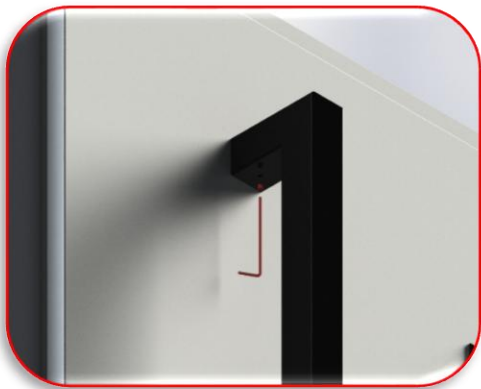

7. Tighten the Allen set screws at the top and bottom of the pull bar handle.