

INSTALLATION INSTRUCTIONS FOR WALL-MOUNTED DECORATIVE PANELS

VARIANT WITH ADAPTER

REQUIRED INSTALLATION ACCESSORIES: mounting adhesive, neutral silicone, wood saw, hammer, drill, screwdriver, two wood or metal drill bits: $\varnothing 3$ mm and $\varnothing 6$ mm, concrete drill bit: $\varnothing 6$ mm, screws: 3.5x25 mm (6 pcs per mounting strip), countersink bit, wall plugs with screws suitable for the wall type, $\varnothing 6$ mm (6 pcs per adapter)

SET INCLUDES: mounting guide strip (3 pcs, uncoated), decorative strip (3 pcs), adapter (1 pc), end strip (1 pc)


NOTE: The nominal length of the elements is 2800 mm, while the working length is 2750 mm. Therefore, any veneer defects or end damage up to 50 mm are not considered a defect.

BEFORE ASSEMBLY

1. Read the installation manual thoroughly before proceeding.
2. Follow occupational safety and construction standards.
3. We recommend that installation is carried out by professionals with experience in construction work.


ADAPTER INSTALLATION:

1. Verify that the product matches the order. Do not install damaged or incorrect products, as this may void the warranty.
2. Use a minimum 2-meter level to check the wall's vertical alignment.
3. Measure the required length and trim the adapter to the desired height by cutting the strip on both sides.
4. Apply mounting adhesive to the uncoated surface of the adapter.
5. Attach the adapter to the wall, ensuring even contact.
6. In the recessed area of the adapter, drill $\varnothing 6$ mm holes at regular intervals for the wall plugs. Use a countersink bit to create recesses for the plug collars.
7. Drill holes into the wall using a $\varnothing 6$ mm concrete drill bit, insert $\varnothing 6$ mm wall plugs, and secure the adapter with screws (see Figure – Wall Mounting).
Note: The screw head must be flush with the recessed surface of the adapter.
8. Connect multiple adapters in series or at corners according to the provided diagram.
Note: Proper installation of the first adapter is crucial for ensuring the correct alignment of all subsequent elements.

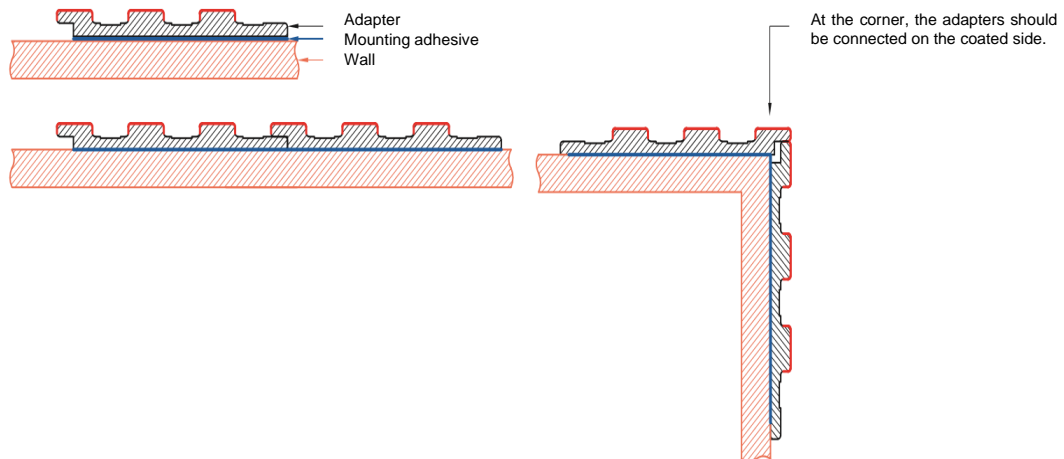


MOUNTING THE GUIDE STRIP (MOUNTING RAIL):


1. Measure the required length and trim the strips to the desired height by cutting both ends.
2. Drill 3 holes at regular intervals for screws using a $\varnothing 3$ mm drill bit and countersink the holes for screw heads.
3. Apply adhesive along the entire length of the guide strip (on the surface 15.4 mm wide!).
4. Place the guide strip into the recess of the adapter.
5. Secure the strip using 3.5x25 mm screws in the prepared holes.

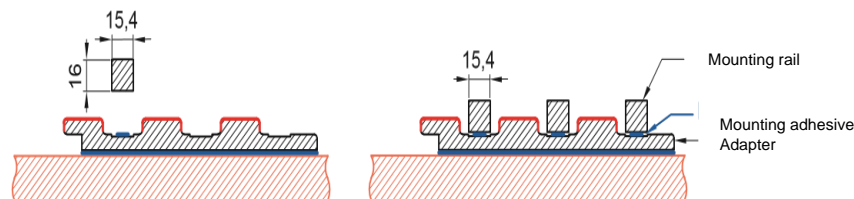

MOUNTING STRIP DRILLING:

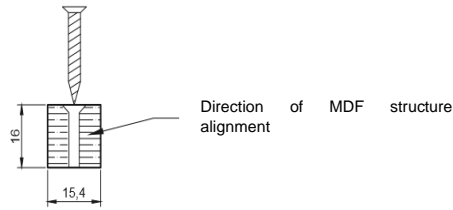


MOUNTING THE GUIDE STRIP

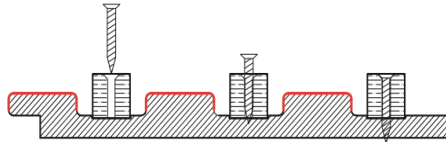


MOUNTING THE DECORATIVE STRIP:

1. Measure the required length and trim the strips to the desired height by cutting both ends.
2. Apply mounting adhesive to the inner edges of the strip according to the diagram below.
3. Place the decorative strip onto the guide strip.

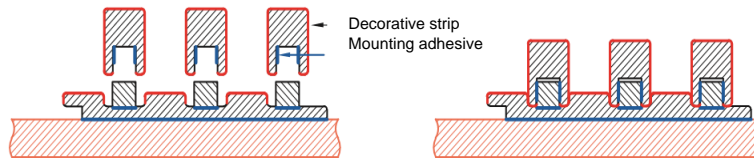


MOUNTING THE END STRIP:

1. The purpose of the end strip is to cover the uncoated part of the adapter.
2. Measure the required length and trim the strip to the desired height.
3. Apply adhesive to the uncoated surface of the end strip according to the diagram below.
4. Attach the strip to the adapter.
5. Secure the strip on the other side (this step is optional when connecting strips in series and mandatory when connecting at corners).
6. We recommend sealing the junction between the decorative panels and the floor to prevent moisture exposure using neutral silicone.

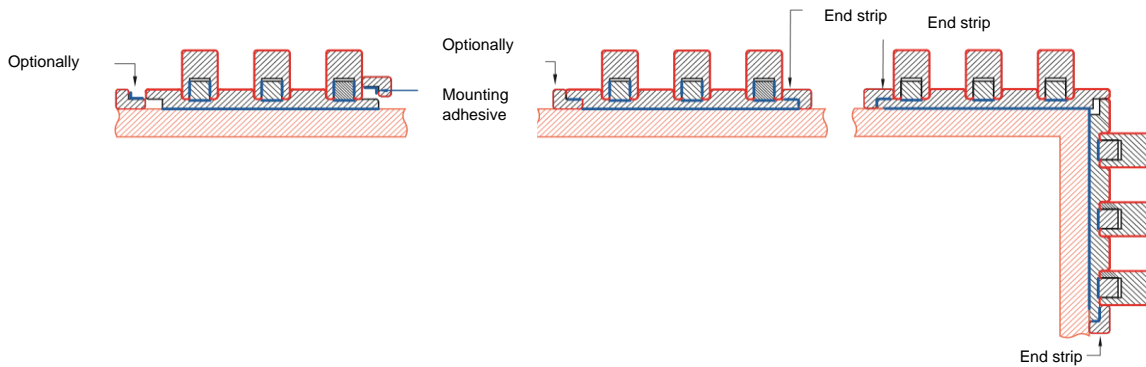

MOUNTING TO THE WALL:

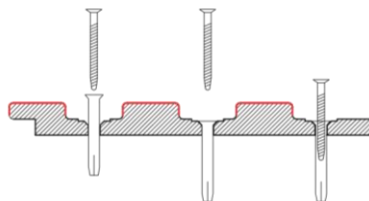

VARIANT WITHOUT ADAPTER

REQUIRED INSTALLATION ACCESSORIES: mounting adhesive, neutral silicone, wood saw, hammer, two-speed drill, screwdriver, Ø6 mm drill bit, mounting dowels 6 x 40 mm (6 pcs per mounting strip)

SET INCLUDES: mounting guide strip (3 pcs, uncoated), decorative strip (3 pcs)

NOTE: The nominal length of the elements is 2800 mm, while the working length is 2750 mm. Therefore, any veneer defects or end damage up to 50 mm are not considered a defect.


BEFORE ASSEMBLY

1. Read the installation manual thoroughly before proceeding.
2. Follow occupational safety and construction standards.
3. We recommend that installation is carried out by professionals with experience in construction work.

MOUNTING THE GUIDE STRIP (MOUNTING RAIL):

1. Measure the required length and trim the strips to the desired height by cutting both ends.
2. In the mounting strip, drill at least 3 holes at regular intervals for the dowels using a Ø6 mm drill bit and countersink the holes for screw heads.
3. Apply adhesive along the entire length of the guide strip (on the surface 15.4 mm wide!).
4. Place the prepared guide strip in the designated position, ensuring proper wall alignment and verticality.
5. Secure the strip using 6 x 40 mm screws in the prepared holes.


Note: The screw head must be flush with the surface of the mounting strip.

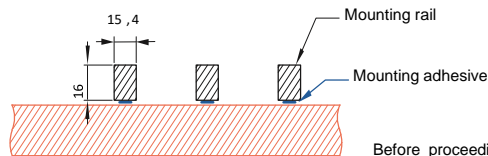

Before proceeding to step 1, determine the spacing between the mounting strips.

MOUNTING THE DECORATIVE STRIP:

1. Measure the required length and trim the strips to the desired height by cutting both ends.
2. Apply mounting adhesive to the inner edges of the strip according to the diagram below.
3. Place the decorative strip onto the guide strip.
4. We recommend sealing the junction between the decorative panels and the floor to prevent moisture exposure using neutral silicone.

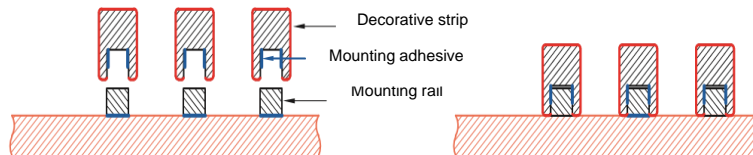

Set Weight:

1. Adapter (1 pc) + Mounting Strip (3 pcs) + Decorative Strip (3 pcs) + End Strip (2 pcs) = 13 kg
2. Mounting Strip (1 pc) + Decorative Strip (1 pc) = 2.5 kg (for a length of 2800 mm)

Legend:

