



## INSTRUCTION FOR BATTERY REPLACEMENT IN A PULL BAR HANDLE WITH A RADIO BUTTON

All work must be carried out in accordance with health and safety regulations and construction best practices by qualified personnel.

The following instructions describe the procedure for replacing the transmitter battery in the ERKADO pull bar handle equipped with a radio-communicating button.

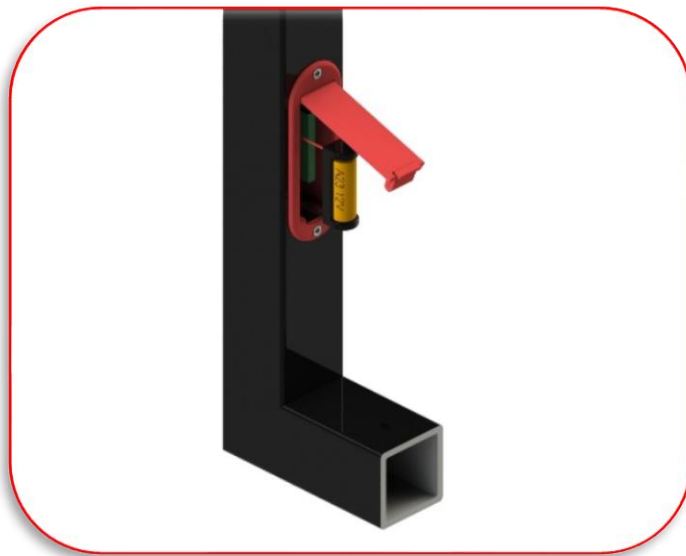

1. The battery and transmitter are housed in a compartment designed for quick and easy replacement. The compartment is located at the bottom of the pull bar handle, on the door leaf side.
2. Only certified, functional A23 12V batteries should be used for replacement (alternative markings: A23/23A/V23GA/LRV08/8LR932/MN21/8LR23/GP23A/23AE/E23A).
3. Battery replacement does not require disassembling the pull bar handle.

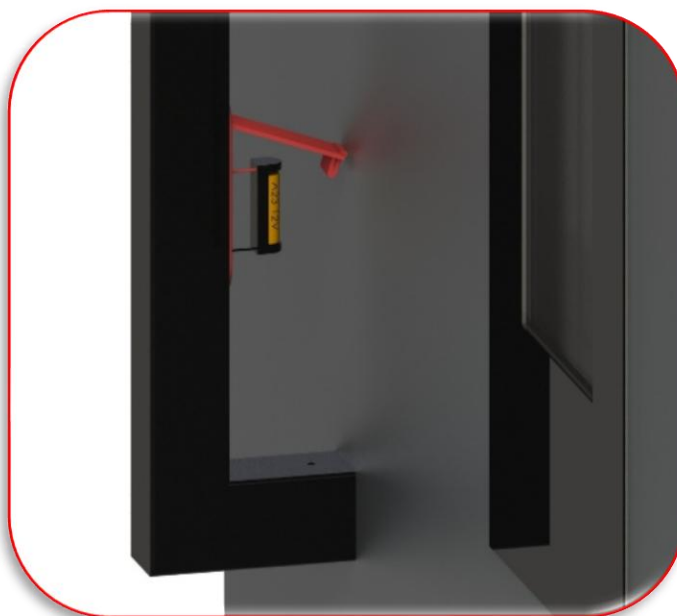

4. The battery is secured in its slot with transparent tape to prevent it from falling out. After replacing the battery, it must be re-secured with the tape.